

# POP OUT TRASH RACCOON™


## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.


WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.  
ESTIMATED ASSEMBLY TIME SEVEN MINUTES.

- 1. METAL BASE AND CONTROL BOX
- 2. FABRIC TRASH CAN
- 3. RACCOON
- 4. SAND BAG
- 5. 6V 2A ADAPTER
- 6. METAL STAKES

### PARTS

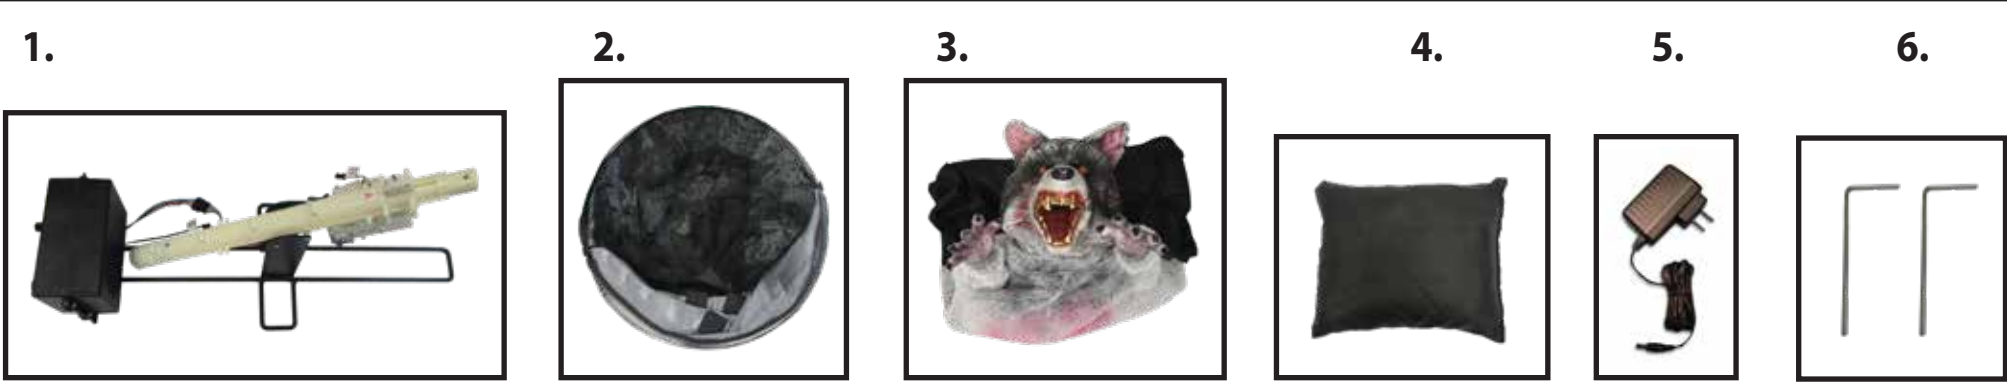


### ASSEMBLY

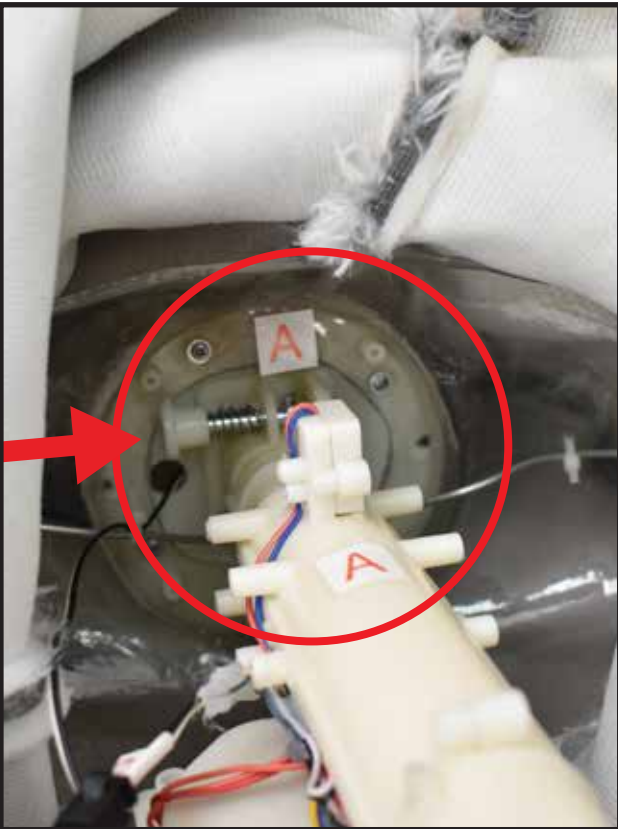

1. Roll back the fur fabric on the RACCOON and push the spring lock to secure the RACCOON to the METAL BASE AND CONTROL BOX. Release spring lock to secure.

MATCH A TO A

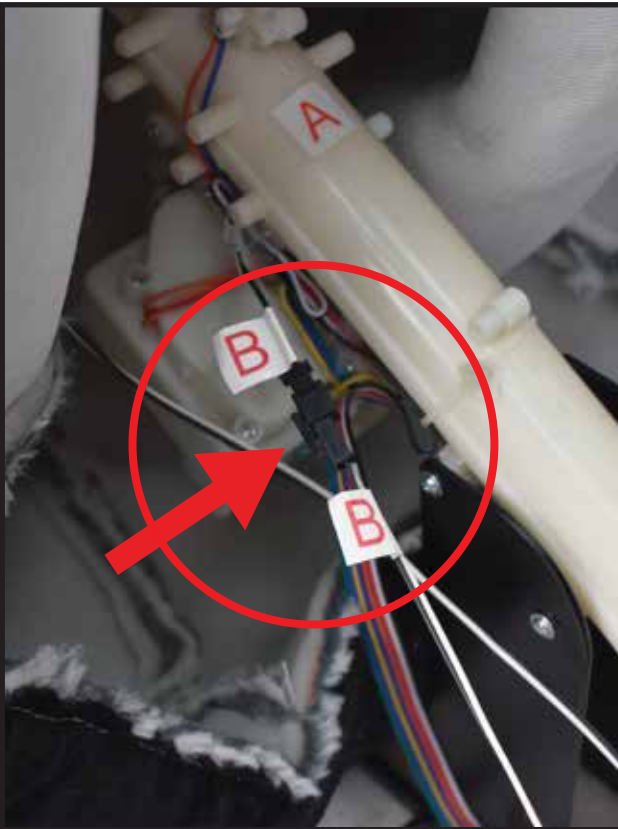

2. Connect the wire bundle from the MODULE to the wire bundle from the RACCOON.


MATCH B TO B



3. Unfasten the two ties at the base of the FABRIC TRASH CAN and unfold from collapsed position.



4. Insert the assembled RACCOON and METAL BASE into the FABRIC TRASH CAN. Position the METAL BASE over the three sets of hook and loop fasteners.

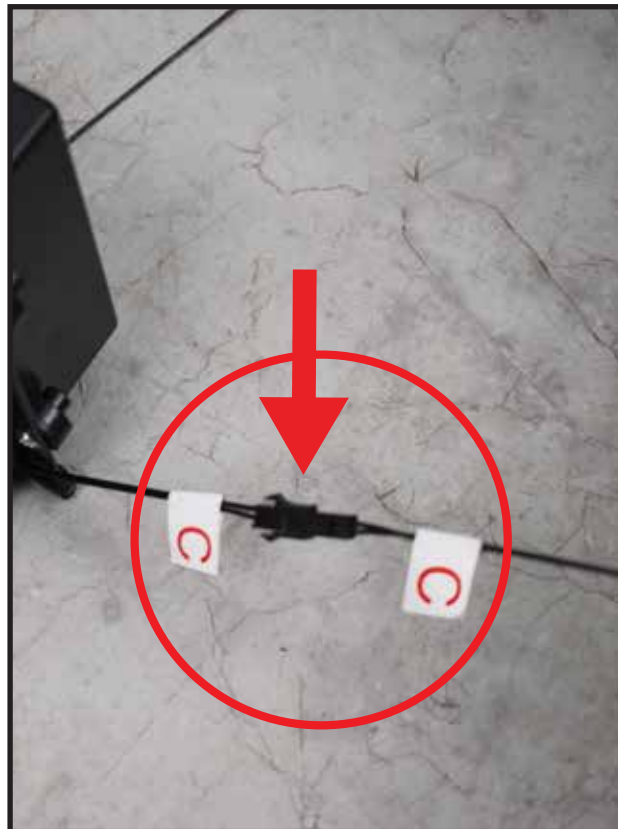

5. Connect the wire bundle from the CONTROL BOX to the wire bundle running from the motion sensor.

MATCH C TO C



6. Locate the front foot of the METAL BASE.

Slide the SANDBAG over the front foot of the METAL BASE and slide it towards the RACCOON BODY.




7. Wrap and secure the first hook and loop fastener in the front of the FABRIC TRASH CAN over the front foot of the METAL BASE.



8. Wrap and secure the second set of two hook and loop fasteners in the middle of the FABRIC TRASH CAN over the middle arms of the METAL BASE.



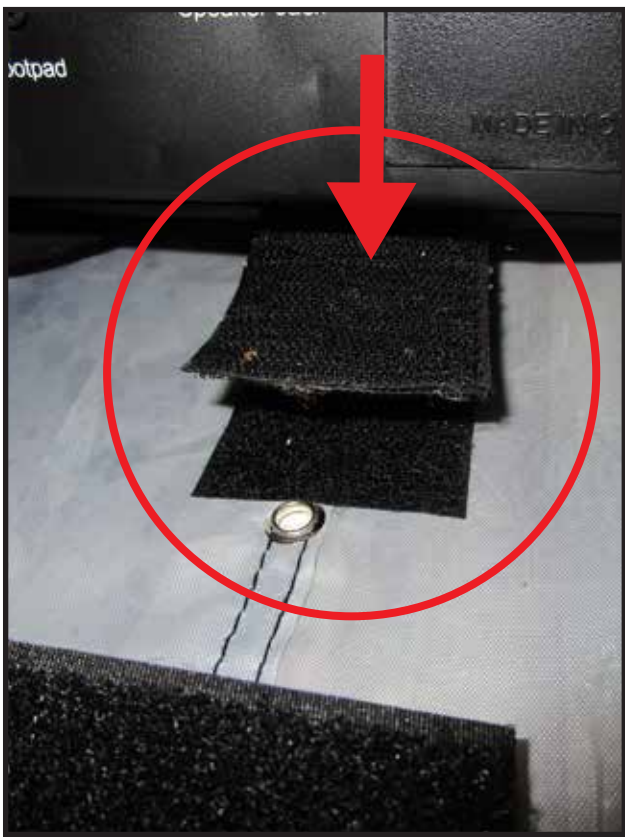

9. Reach through the back FABRIC TRASH CAN flap and secure the fourth hook and loop fastener in back of the FABRIC TRASH CAN to the METAL FRAME.




10. Insert 4 AA batteries (not included) or 6V 2A adapter (included) into the control box. Move the switch to the on position. Make a loud sound (clap) or move in front of the item to activate. Turn the item off when not in use. Remove 6V 2A adapter when using batteries.



11. Roll the fur fabric back down on the RACCOON and close the flap in back of the BARREL. Secure the three hook and loop fasteners to complete your setup.

### OPTIONAL METAL STAKE SET UP

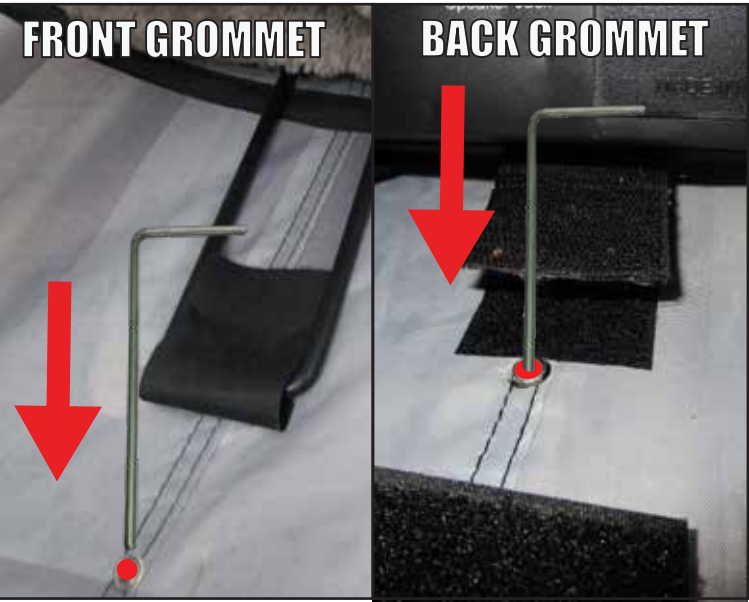

To further secure your FABRIC TRASH CAN for sheltered outdoor use, firmly insert METAL STAKES through the metal grommets. The grommets are located near the front and back of the BASE inside the FABRIC TRASH CAN.

### OPTIONAL FOOTPAD SET UP

**FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.**

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the MODULE.
  2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
  3. Step on the FOOTPAD to activate the scary sequence!
- \* Footpads are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)




### OPTIONAL EXTERNAL SPEAKER SET UP

**EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.**

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the MODULE.
2. Use volume knob on external speaker to control volume levels.



#### Battery Diagram

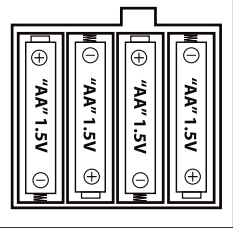

#### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.**

#### WARNING


**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND. DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



**DO NOT RETURN THIS ITEM TO THE STORE!** If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.



#### SMART PHONE SCAN SETUP VIDEO

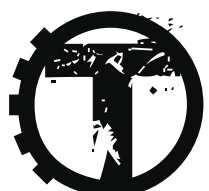

visit us at [tekkydesign.com](http://tekkydesign.com)  
Requires 6V 2A ADAPTER (included)  
or 4AA batteries (not included)

ALL NEW MATERIALS:  
METAL, FOAM, PLASTIC, POLYESTER  
Surface washable only.

POP OUT TRASH RACCOON™  
is a trademark of Tekky.  
Copyright © 2022 Tekky.  
All Rights Reserved.  
MADE IN CHINA