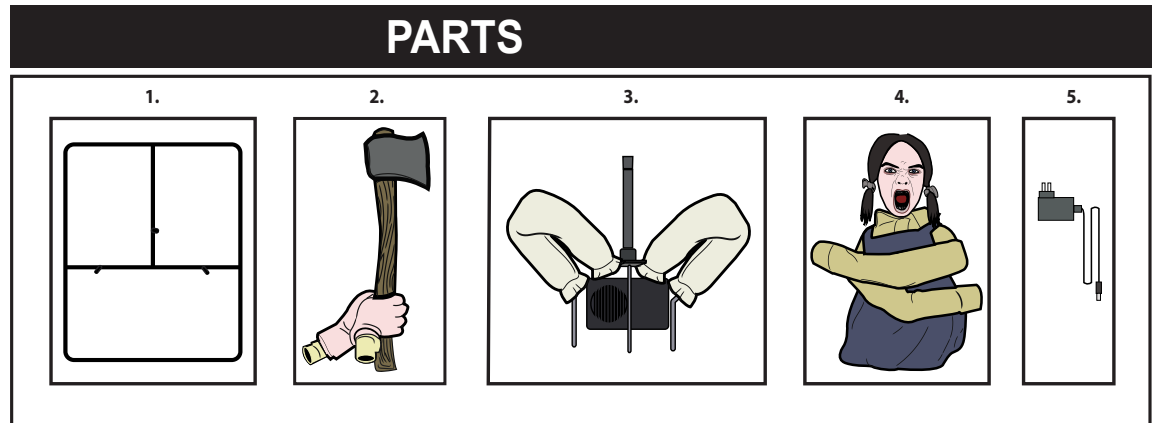


Please follow the step by step guide and enjoy **Axe Me Something™!**

**PARTS**

- 1: METAL STAND
- 2: AXE AND HANDS
- 3: CONTROL BOX AND LEGS
- 4: BODY AND MODULE
- 5: 6V 2A ADAPTER

BEFORE ASSEMBLING, REMOVE ALL THE ABOVE PARTS FROM BOX. IF ANY PART IS MISSING, DO NOT ATTEMPT TO ASSEMBLE THE PRODUCT. CONTACT CUSTOMER SERVICE AT BOO@HAUNTEDHILLFARM.COM, OR BY PHONE FROM 9:00AM TO 5:00PM EST AT 1-888-840-4559.

CARE AND STORAGE INSTRUCTIONS

When the product not in use, store in its original packing after it is completely dry.

Keep away from heat.

Please read all instructions carefully before assembling. Save this instruction sheet for future reference.

WARNING

This item is not a toy and should be used for decoration only. This item contains small parts that can be a choking hazard. Keep all plastic and wire parts away from children. Recommended for ages 15 and up.

- 1. Please use the adapter supplied by manufacturer.
- 2. Please assemble item according to instructions. Connect all wires according to matching letter.
- 3. Children should be supervised by adults. Item should not be grabbed, as it becomes a tipping hazard. Keep all away from the adapter, as it heats up during operation.
- 4. This item contains Polyvinyl Chloride (PVC).
- 5. Colors, style and contents may vary slightly from those shown on the package.


SMART PHONE SCAN

SETUP VIDEO




ASSEMBLY INSTRUCTIONS


ASSEMBLY

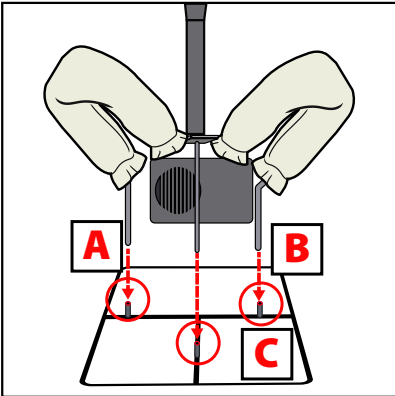


1. Line up the CONTROL BOX AND LEGS with the METAL STAND. (Match A to A) (Match B to B) (Match C to C) For optimal performance make sure METAL STAND is on flat even ground.

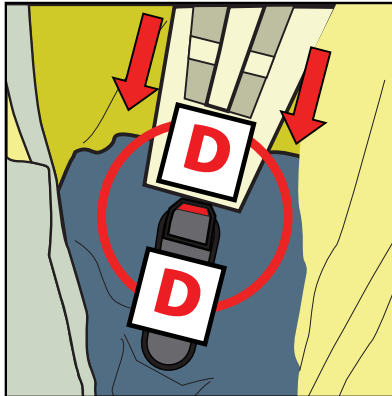


2. Open the back of the dress on the BODY AND MODULE. Connect the BODY AND MODULE to the pole on the CONTROL BOX AND LEGS. (Match D to D)

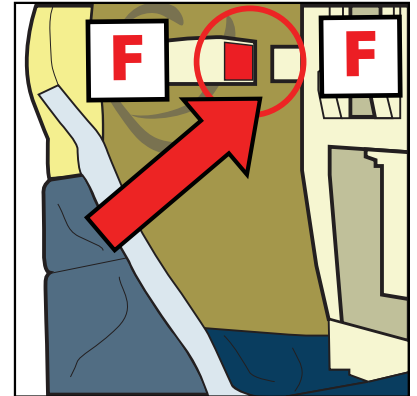


3. Reach inside the BODY AND MODULE and connect the left arm to the module. (Match F to F)

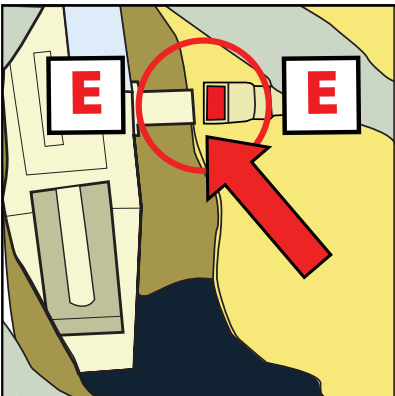


4. Reach inside the BODY AND MODULE and connect the right arm to the module. (Match E to E)

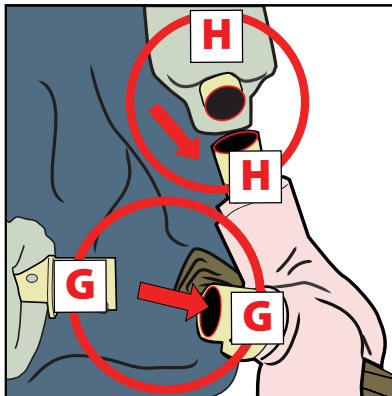


5. Insert the ends of both arms on the BODY AND MODULE into the AXE AND HANDS. (Match G to G) and (Match H to H)

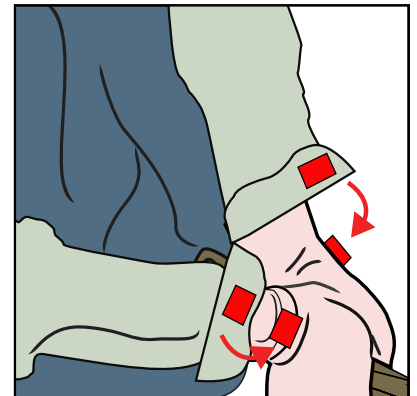


6. Attach hook and loop fasteners located in both sleeves to the wrists on the AXE AND HANDS.

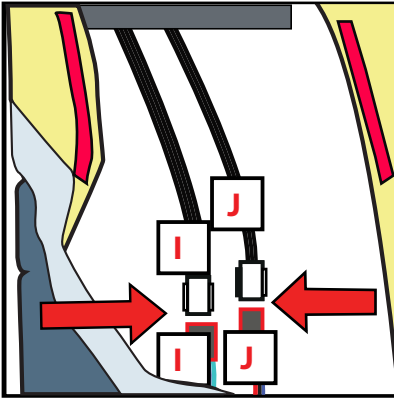

7. Connect the wires labeled I and J located on the CONTROL BOX AND LEGS to the wires on BODY AND MODULE. Close hook and loop fasteners on the back of the dress. Match I to I- (Hands movement) Match J to J- (Motion sensor)

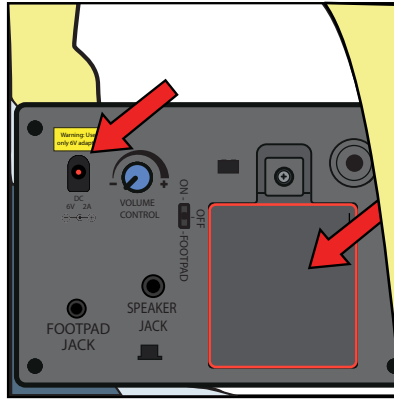

8. Connect 6V 2A ADAPTER (included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the CONTROL BOX.

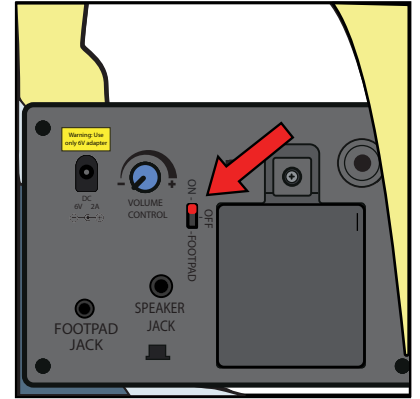

9. Turn the switch to the ON position to operate in Sound and Motion activation mode. Move in front of the item or make a loud sound (clap) to activate the item. Turn item OFF when not in use.

WARNING

**STAND BACK FROM ITEM WHILE OPERATING, AND KEEP CHILDREN BACK!
AXE SWINGS DOWN QUICKLY!**

OPTIONAL FOOTPAD SET UP


FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD JACK on the CONTROL BOX.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!



OPTIONAL EXTERNAL SPEAKER SETUP

1. This prop can be played through an external speaker (sold separately). Connect the wire from your external speaker to the jack labeled SPEAKER JACK on the control box
2. Adjust the volume knob on external speaker to control volume levels.

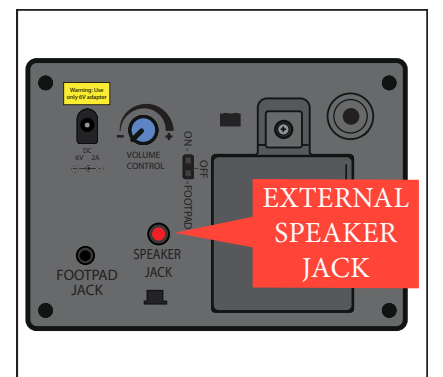




Warnings

- This product is for decoration only and is not a toy. Small parts and choking hazard. Use caution with children under the age of 15.
- Do not position the decoration near candles, sources of heat, or in direct sunlight.
- The decoration cannot be connected to the power supply directly.
- Decoration should be on a level, stable surface to prevent it from falling over.
- This product is fragile and should be assembled with care.
- Surface washable only.
- Please follow the steps and requirements specified in the instruction to ensure safety and reliability during the installation.

Battery Diagram

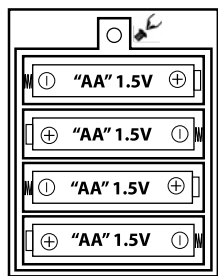

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.

Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated.

Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the item before being charged.

Non-rechargeable batteries are not to be recharged.

The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

STAY CLEAR OF ITEM WHILE OPERATING.

DO NOT PLACE ITEM ON UNEVEN GROUND.

DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION

**** FOR INDOOR USE ONLY ****

Storage tips: We suggest saving the carton for storing your figurine. Store in a cool, dry area where the temperature does not exceed 100°F.