

HACKING HEIDI™






INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN


WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING. ESTIMATED ASSEMBLY TIME TEN MINUTES.

PARTS

1. METAL BASE
2. LEG POLES (2)
3. SHOES (2)
4. PANTS
5. CONTROL BOX
6. SUPPORT POLE
7. WAIST RING
8. HEAD AND CLOTHES
9. AXE AND HANDS
10. 6V 2A ADAPTER

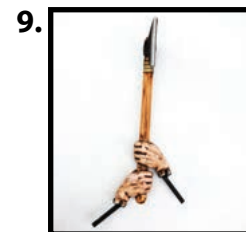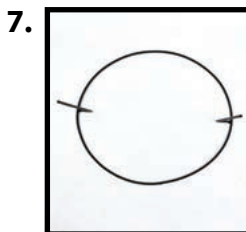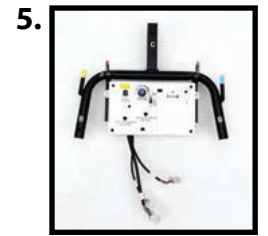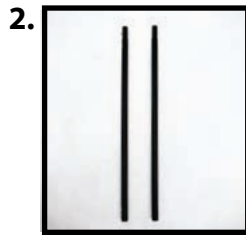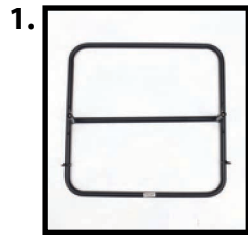


ASSEMBLY

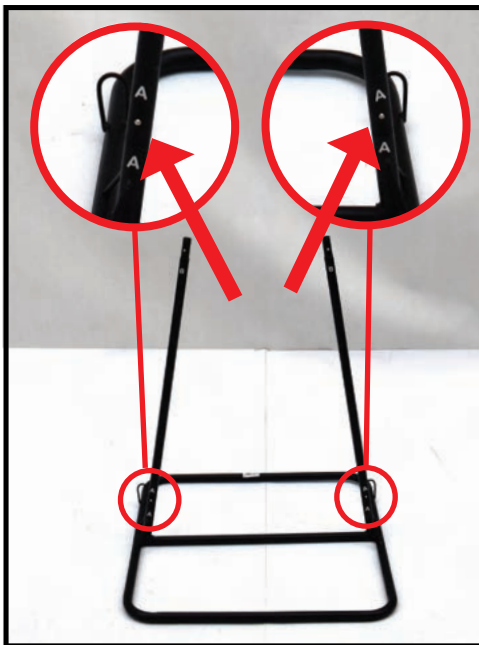


1. Snap lock the LEG POLES(2) labeled A to the METAL FRAME.


MATCH A TO A,
MATCH A TO A

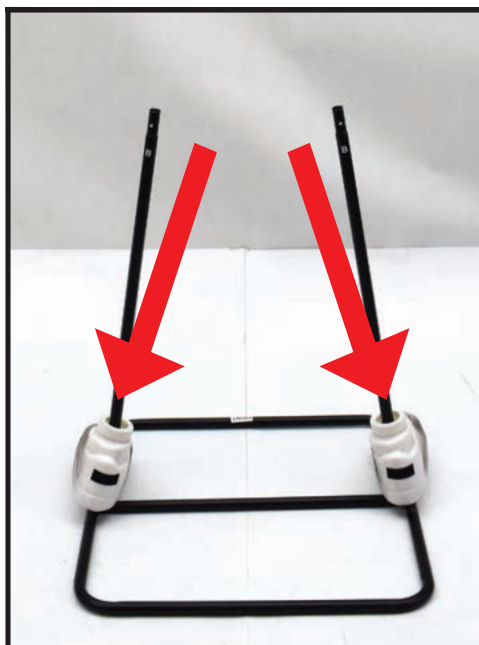

2. Slide the SHOES(2) over the LEG POLES to the METAL BASE.

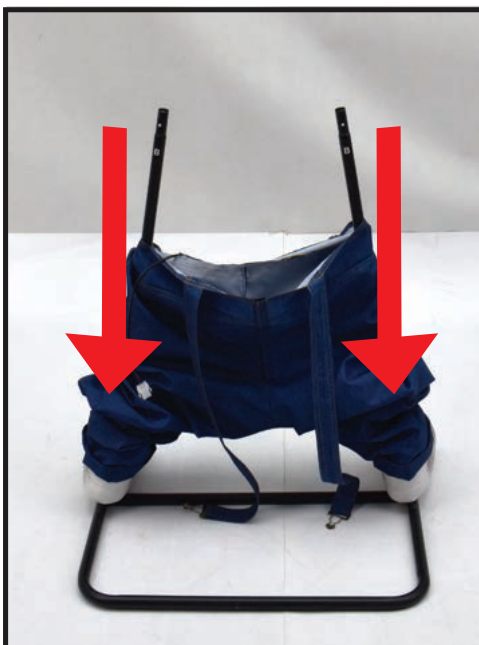

3. Slide the PANTS over the LEG POLES to the SHOES.

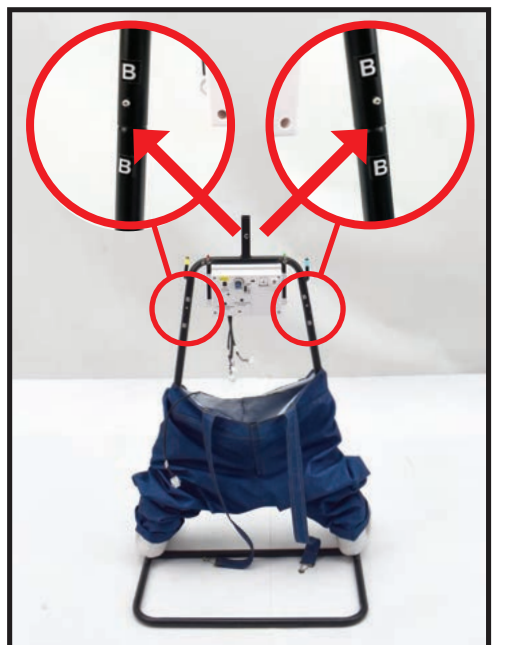


4. Snap lock the CONTROL BOX labeled B to the LEG POLES.

MATCH B TO B,
MATCH B TO B



5. Snap lock the SUPPORT POLE labeled C to the CONTROL BOX.

MATCH C TO C

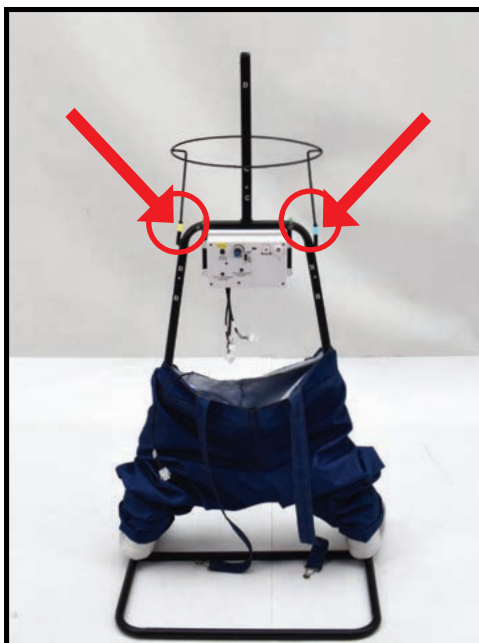

6. Insert the WAIST FRAME into the CONTROL BOX.

MATCH YELLOW TO YELLOW,
MATCH BLUE TO BLUE



7. Snap lock the HEAD AND CLOTHES labeled D to the SUPPORT POLE.

MATCH D TO D



8. Snap lock the left arm labeled E to the module inside the HEAD AND CLOTHES.

MATCH E TO E

ASSEMBLY



9. Snap lock the right arm labeled F to the module inside the HEAD AND CLOTHES.

MATCH F TO F




10. Snap lock the AXE AND HANDS labeled G and H to the arm poles. Attach the sleeves to the hands using the hook and loop attachment.

MATCH G TO G, MATCH H TO H




11. Attach the springs from the HEAD AND BODY to the frame on the CONTROL BOX.

MATCH RED TO RED,
MATCH GREEN TO GREEN

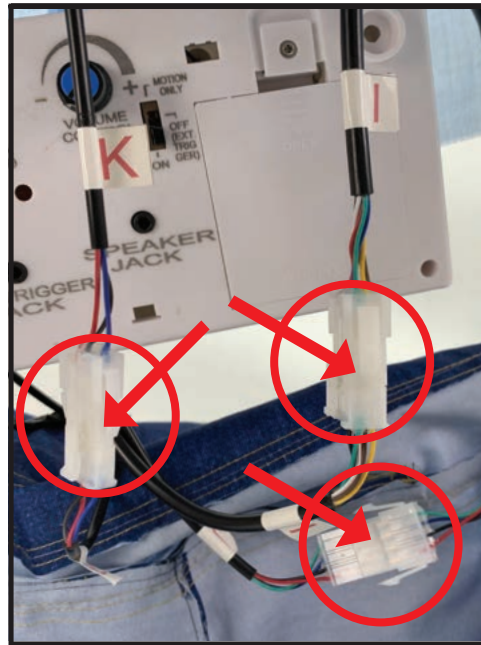

12. Attach the wires to the CONTROL BOX.

MATCH I TO I (Arm movement),
MATCH J TO J (Mouth movement, light up eyes),
MATCH K TO K (Human sensor)

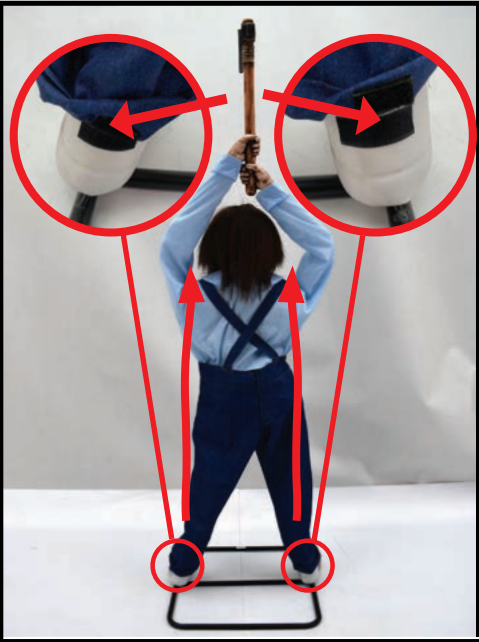


13. Raise straps on PANTS over the HEADS AND CLOTHES and attach straps on front buttons.

Attach hook and loop fasteners on PANTS to back of the SHOES.



OPERATING INSTRUCTIONS

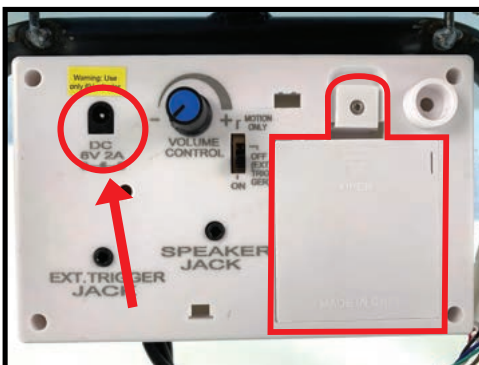

Plug in the 6V 2A ADAPTER (included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.



Move the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate the item.


Turn the item to the OFF position when not in use.

OPTIONAL EXT. TRIGGER SET UP

EXT. TRIGGER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Insert the cable from EXT. TRIGGER into the jack labeled EXT. TRIGGER JACK on the CONTROL BOX.
- 2. Place the switch in the EXT. TRIGGER position to enable EXT. TRIGGER activation.
- 3. Step on the EXT. TRIGGER to activate the scary sequence!

*Ext. Triggers are sold separately and can be purchased at www.tekkyaccessories.com

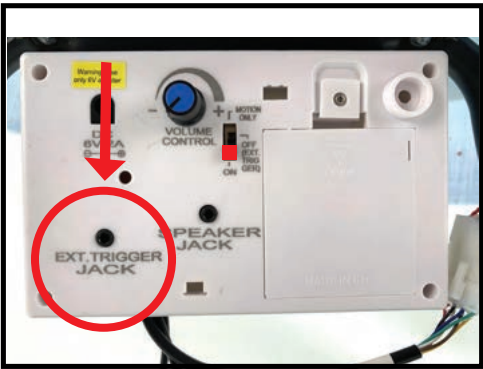


OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
- 2. Use volume knob on external speaker to control volume levels.



Battery Diagram

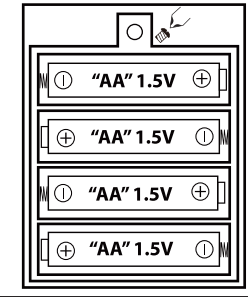

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND. DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



visit us at tekkydesign.com

Requires 6V 2A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS: METAL, PLASTIC, FOAM, POLYESTER
Surface washable only.

HACKING HEIDI™ is a trademark of Tekky. Copyright © 2024 Tekky. All Rights Reserved. MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE! If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

SMART PHONE SCAN
SETUP VIDEO

