

CONTAMINATION KID™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN


WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING. ESTIMATED ASSEMBLY TIME TEN MINUTES.

1. FRONT LEGS (2)
2. BACK LEGS (2)
WITH FOG HOSE
3. FRAME WITH
CONTROL BOX
AND FOG DIVERTER
4. HEADS MODULE
5. HEADS AND FOG HOSES
6. BODY FRAME WITH
BLISTER
7. HORNS (4)
8. TAIL
9. COSTUME
10. FOG CORD AND
ADAPTER
11. FOG CLAMP
12. 6V 2A ADAPTER
13. SNAP LOCK REMOVAL
TOOL

PARTS



ASSEMBLY

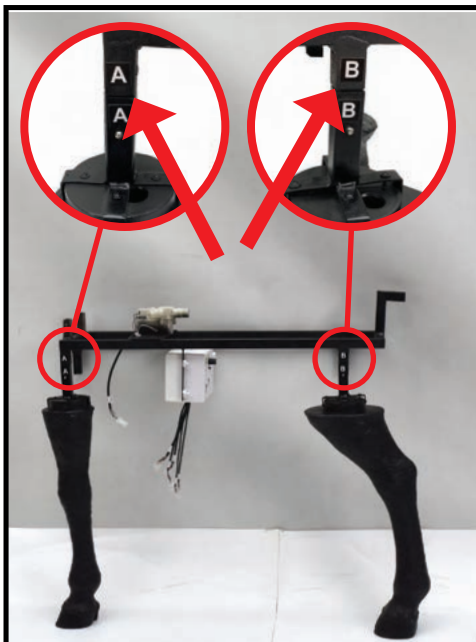


1. Snap lock the left FRONT LEG labeled A and left BACK LEG labeled B to the FRAME WITH CONTROL BOX AND FOG DIVERTER.

MATCH A TO A,
MATCH B TO B




2. Snap lock the right FRONT LEG labeled C and right BACK LEG with fog hose labeled D to the FRAME WITH CONTROL BOX AND FOG DIVERTER.

MATCH C TO C,
MATCH D TO D

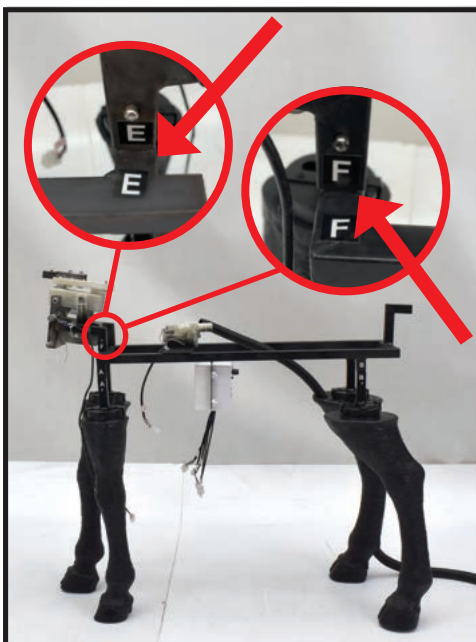

3. Snap lock the HEADS MODULE labeled E and F to the FRAME WITH CONTROL BOX AND FOG DIVERTER.

MATCH E TO E,
MATCH F TO F

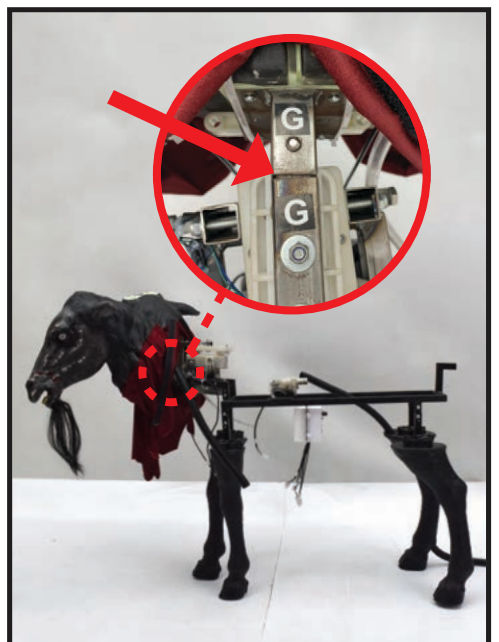

4. Snap lock the HEADS labeled G to the HEADS MODULE.

MATCH G TO G



5. Snap lock the HORNS into the HEADS.

MATCH H TO H, MATCH I TO I
MATCH J TO J, MATCH K TO K



6. Attach the BODY FRAME WITH BLISTER to the FRAME WITH CONTROL BOX AND FOG DIVERTER.



7. Connect FOG HOSES from the right BACK LEG and HEADS (labeled R, S, and U) to FOG DIVERTER.


MATCH R TO R (Head),
MATCH S TO S (Back Leg),
MATCH U TO U (Head)



8. Snap lock the TAIL labeled L to the FRAME WITH CONTROL BOX AND FOG DIVERTER.

MATCH L TO L

ASSEMBLY

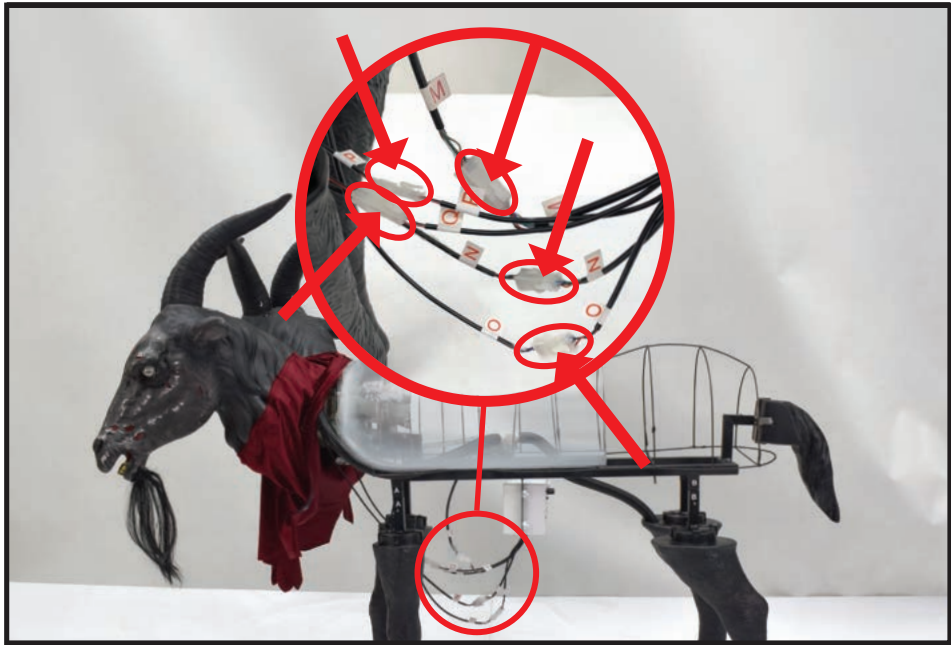

9. Attach the wires labeled M, N, O, P, and Q to the CONTROL BOX.

MATCH M TO M (Fog diverter),
MATCH N TO N (Head movement),
MATCH O TO O (Human sensor),
MATCH P TO P (Light up eyes - left head),
MATCH Q TO Q (Light up eyes - right head)



10. Drape the COSTUME over the BODY FRAME WITH BLISTER. Attach the hook and loop fastener from the HEADS to the COSTUME. Attach the hook and loop fastener from the COSTUME to the back of the BODY.

OPERATING INSTRUCTIONS



Plug in the 6V 2A ADAPTER (included) or insert 4 fresh AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.



Move the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate the item.

Turn the item to the OFF position when not in use.



OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD JACK on the CONTROL BOX.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

*Footpads are sold separately and can be purchased at www.tekkyaccessories.com



OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



! FOG MACHINE INFORMATION

Please follow steps 1 through 10 on the assembly instructions before beginning fog machine setup:



1. Your fog machine (400 or 1000 watt) can be used in conjunction with CONTAMINATION KID™.
2. Do not use with any other fog machine.
3. FOG MACHINE IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.
4. Manufacturer does not guarantee the performance of the fog machine.
5. Make sure to use the supplied fog machine components when hooking up to the fog machine, or damage could occur.
6. MAKE SURE THE CONTAMINATION KID™ IS SET TO THE "OFF" POSITION AND YOUR FOG MACHINE IS TURNED OFF WHEN NOT IN USE.

Fog Clamp - PATENT <https://tekkydesign.com/pages/terms-conditions.php>

FOG MACHINE ASSEMBLY INSTRUCTIONS:


1. Fog hose will click and secure in place.
(See Illustration A)

Depress the lever arms of the FOG CLAMP and attach to the fog machine nozzle.
(See Illustration B)

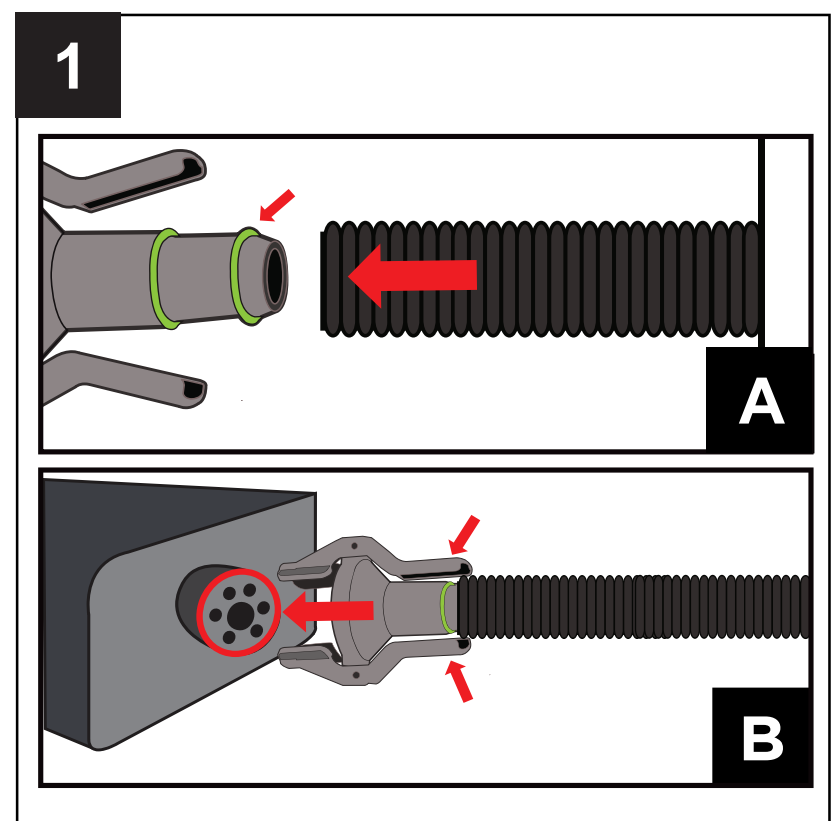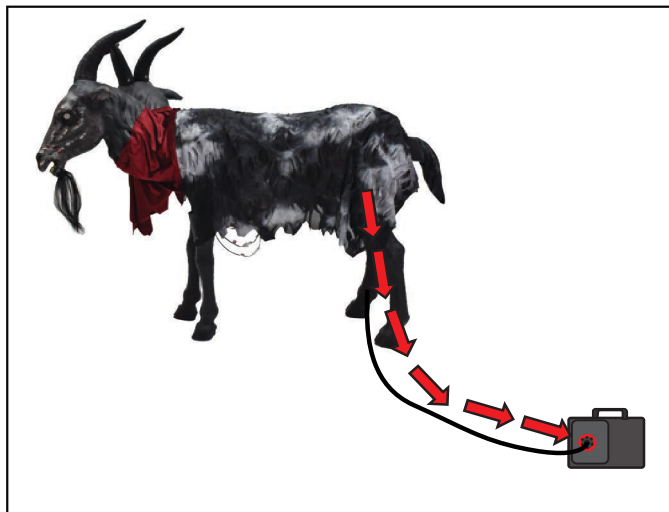

2. Plug the FOG CORD into your fog machine. If the fog cord does not fit see step 2a.

- 2a. Plug the FOG CORD into the FOG CORD ADAPTER. Plug FOG CORD ADAPTER into your fog machine.
(See illustration 2a)

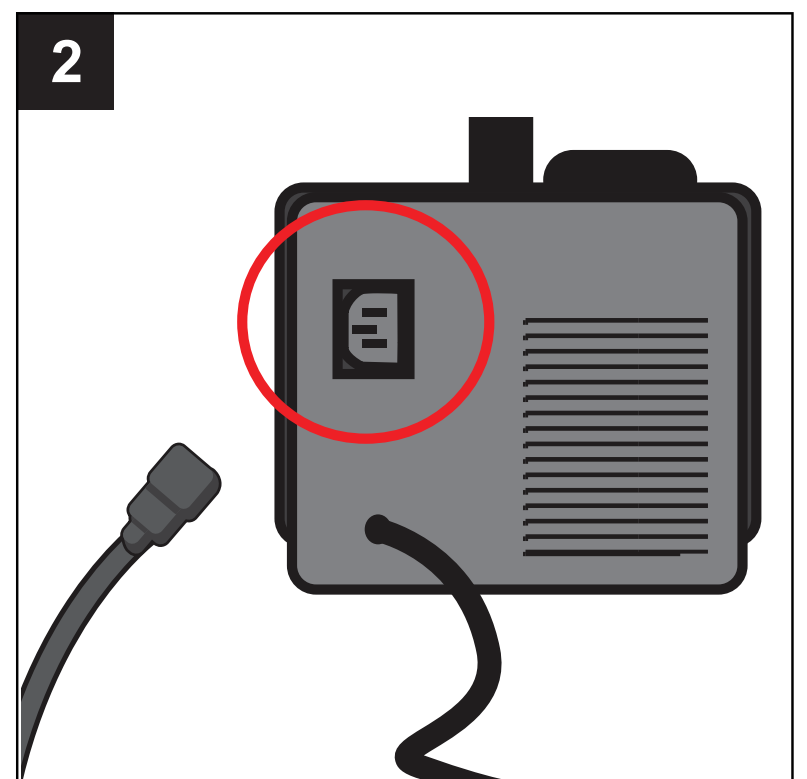


FOG MACHINE OPERATIONS:

3. Plug the other end of the FOG CORD into the jack labeled R on the CONTROL BOX.

(Match R to R)


Make sure your fog machine is heated up properly, turn your fog machine ON, and then turn the Contamination Kid™ switch to the “ON” position. Make a loud sound (clap) or move in front of the item to activate.

If no fog appears, press the relay switch on the CONTROL BOX.

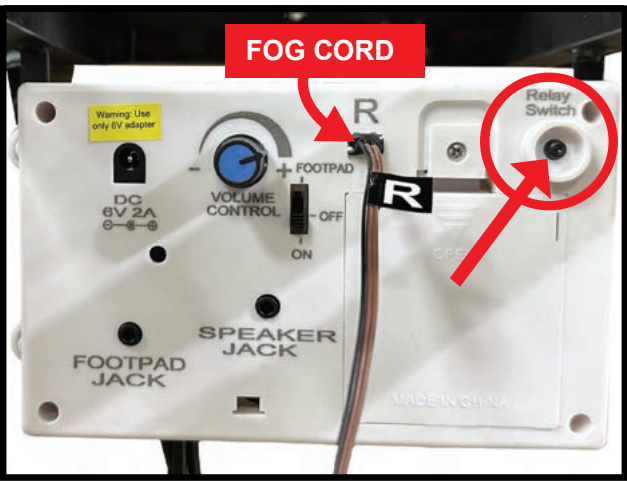

WARNING

Only for use with 400 watt or 1000 watt fog machines.
Do not use with any other fog machine.
Manufacturer does not guarantee the performance of the fog machine.
Make sure to use the supplied fog machine components when hooking up to the fog machine, or damage could occur.

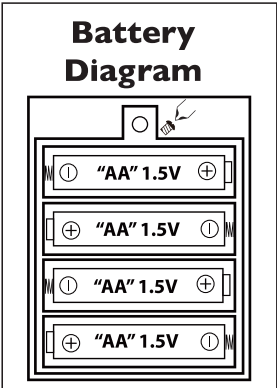

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.
Use only batteries recommended in the instructions.
Do not mix new and used batteries.
Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
Be mindful to insert batteries with the correct polarity (+/-) as indicated.
Remove all exhausted batteries.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the item before being charged.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short-circuited.
Always dispose of exhausted batteries properly.
Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



visit us at tekkydesign.com

Requires 6V 2A ADAPTER (included)
or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, PLASTIC, POLYESTER
Surface washable only.

CONTAMINATION KID™
is a trademark of Tekky.
Copyright © 2024 Tekky.
All Rights Reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go
to www.tekkydesign.com for assistance.

SMART PHONE SCAN
SETUP VIDEO

