

ANYMATED GHOST CANDLE

Tekkv Item #58777 - ANIMATED GHOST CANDLE™



Manufactured for and distributed by: Tekky, Orland Park, IL 60467 USA MADE IN CHINA

HAUNTED CANDLE HOLDS A STRIKING SURPRISE! ANIMATED GHOST CANDLE **Batteries** Included* *for demo purposes only **BATTERY INSTRUCTIONS**

HAUNTED CANDLES HOLD A STRIKING SURPRISE! MOTION ACTIVATED

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

- Carefully remove and discard the "Try Me" wire. 1. 2. Replace demonstration batteries with 4 brand
- new "AA" alkaline batteries. 3. Place switch on the bottom of the ANIMATED
- GHOST CANDLE™ to the "ON" position. Wave your hand in front of ANIMATED GHOST
- CANDLE™ to activate scary sequence! NOTE: Leave switch in the "DEMO" position when not in use. SURFACE

WASHABLE ONLY. All new materials: Plastic Item #58777 ANIMATED GHOST CANDI ETM is a trademark of Tekky. Copyright © 2019 Tekky.

All Rights Reserved. TekkvDesign.com

AND CAUTIONS

"AA" 1.5V

"AA" 1 5V

"AA" 1.5V

"AA" 1.5V

- · Battery installation and removal should be performed by an adult.
- · Remove batteries when not in use.
- · Use only batteries recommended in the instructions.
- · Do not mix new and used batteries.
- · Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. · Be mindful to insert batteries with
- the correct polarity (+/-) as indicated.
- · Remove all exhausted batteries.
- · Rechargeable batteries are only to be charged under adult supervision.
- · Rechargeable batteries are to be removed from the item before being charged.
- · Non-rechargeable batteries are not to be recharged.
- . The supply terminals are not to be short-circuited.
- · Always dispose of exhausted batteries properly.
- . Do NOT dispose of batteries in fire, they may leak or explode.



This item is not a toy. For decoration only. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.