

LED ANIMATED HOWLING WEREWOLF

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN
WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME SEVEN MINUTES.

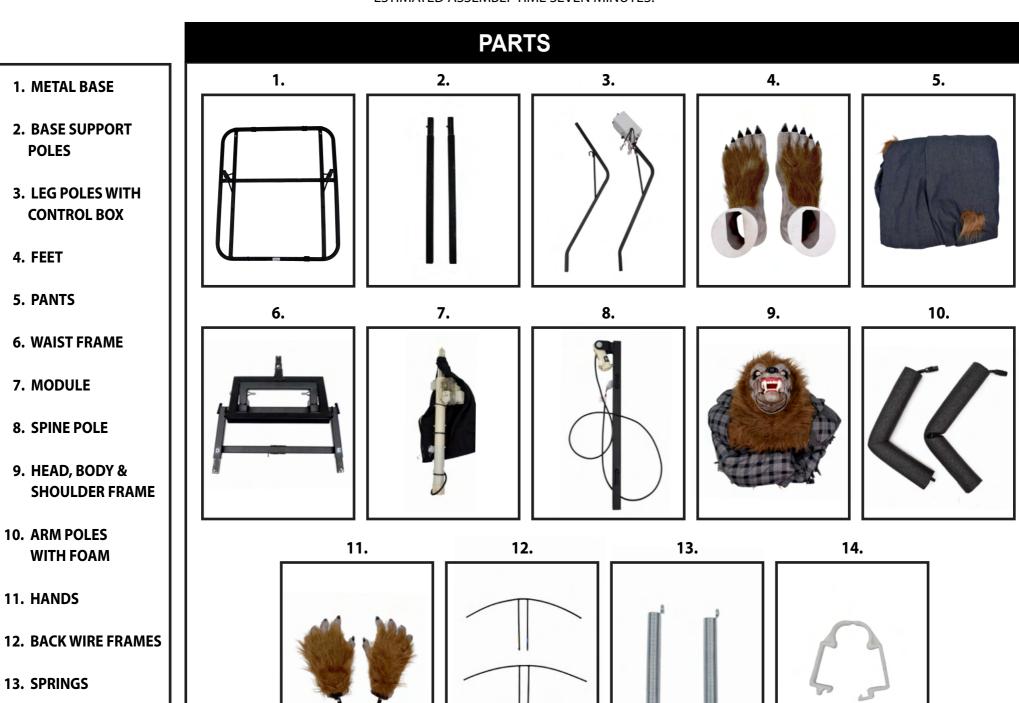

ASSEMBLY

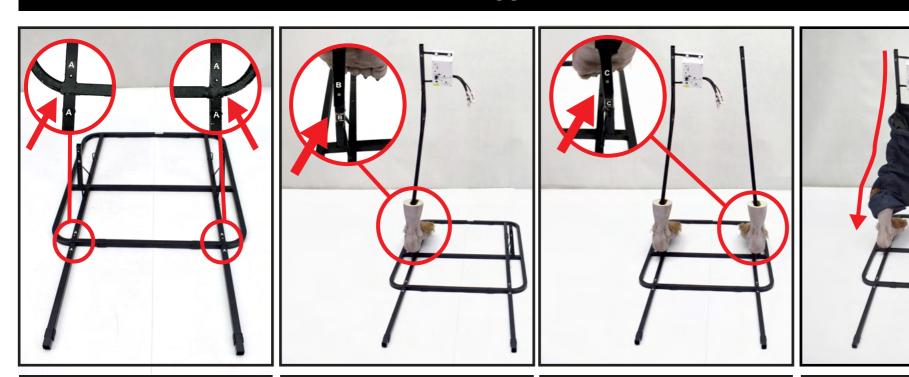

1. Insert and snap lock the BASE SUPPORT POLES into the METAL BASE.

MATCH A TO A

14. WIRE MANAGEMENT

2. Slide the LEG POLE WITH CONTROL BOX through the top of the left FOOT. Insert and snap lock the LEG POLE WITH CONTROL BOX to the METAL BASE. Have the foot facing towards the FRONT label of the METAL BASE.

MATCH B to B

MATCH C to C

3. Slide the LEG POLE through the top of

foot facing towards the FRONT

label of the METAL BASE.

the right FOOT. Insert and snap lock the

LEG POLE to the METAL BASE. Have the


4. With the FRONT label of the PANTS facing the FRONT label of the metal base, slide the PANTS over LEG POLES while assisting the PANTS liner underneath over the LEG POLES.

Readjust PANTS liner to lay flat.

ASSEMBLY





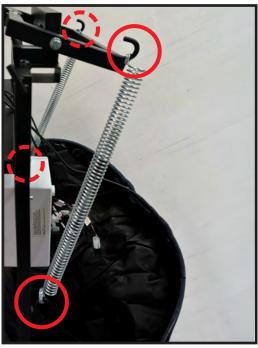

5. Insert and snap lock the WAIST FRAME into the LEG POLES.

MATCH D to D, MATCH E to E

6. Insert and snap lock the SPINE POLE into the WAIST FRAME.

MATCH F to F

7. Remove the CLEVIS & COTTER PIN from the WAIST FRAME. Insert the MODULE into the WAIST FRAME. Secure the MODULE by inserting the CLEVIS PIN through the hole in the WAIST FRAME and MODULE. Slide the COTTER PIN through the hole in the CLEVIS PIN to secure.

MATCH G to G

8. Attach all springs.

(WARNING: PINCH POINT)

SPRINGS MUST BE ATTACHED FOR ITEM TO OPERATE.









8. Push SPINE POLE slightly forward and hold the circular locking pin of the SPINE POLE. Insert the MODULE into the circular locking pin. Release the locking pin to secure the SPINE POLE to the MODULE. MATCH H to H

10. Insert and snap lock the HEAD & BODY and SHOULDER FRAME to the SPINE POLE.

MATCH I to I

11. Slide the left ARM POLE WITH FOAM up the left sleeve. Insert and snap lock the left ARM POLE to the SHOULDER FRAME.

MATCH K to K

12. Slide the right ARM POLE WITH FOAM up the right sleeve. Insert and snap lock the right ARM POLE to the SHOULDER FRAME.

MATCH L to L









13. Insert and snap lock the left HAND to the left ARM POLE WITH FOAM. MATCH M to M

Attach the hook and loop fastener located on the left sleeve to the left HAND.

14. Insert and snap lock the right HAND to the right ARM POLE WITH FOAM.


MATCH N to N

Attach the hook and loop fastener located on the right sleeve to the right HAND.

15. Insert the poles on the BACK WIRE FRAMES into the holes located on the SPINE FRAME.

MATCH BLUE to BLUE, MATCH YELLOW to YELLOW 16. Connect the wires located on the MODULE to the CONTROL BOX (MATCH O to O).
Connect the wire located on the SHOULDER FRAME to the CONTROL BOX (MATCH P to P).
Connect the wire located on the HEAD & BODY to the CONTROL BOX (MATCH Q to Q).
Connect the wire located on the PANT'S human sensor to the CONTROL BOX (MATCH R to R). Connect the wire located on the SPINE POLE to the CONTROL BOX (MATCH S to S).

ASSEMBLY

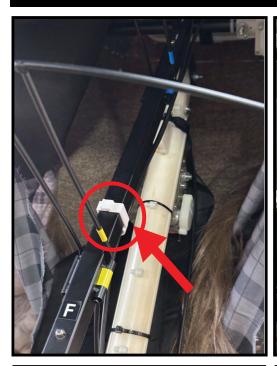

17. Using the WIRE MANAGEMENT CLIP, secure the wires to the SPINE POLE as seen in diagram.



18. Insert the two PANTS wire frame posts into the holes located on the WAIST FRAME.



19. Hook and loop fasten the BODY fur to the front of the PANTS.



20. Adjust the BODY's clothing over the PANTS as seen in diagram.

OPERATING INSTRUCTIONS



Plug in the 6V 3A ADAPTER (not included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.



Move the switch to the ON position. Make a loud sound (clap) or move in front of the item to activate.

OPTIONAL FOOTPAD SET UP

- 1. Insert the cable from optional footpad into the jack labeled FOOTPAD JACK on the CONTROL BOX.
- 2. Place the switch in the FOOTPAD position to enable footpad activation.
- 3. Step on the FOOTPAD to activate the scary sequence!



 
OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- **1.** Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
- **2.** Use volume knob on external speaker to control volume levels.



Battery Diagram



BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or

different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged

Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.

This product is intended for use by persons 15 years of age and older.

Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

STAY CLEAR OF ITEM WHILE OPERATING.

DO NOT PLACE ITEM ON UNEVEN GROUND.

DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE! If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

SMART PHONE SCAN SETUP VIDEO





visit us at tekkydesign.com

Requires 6V 3A ADAPTER (not included) or 4AA batteries (not included)
ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

LED ANIMATED HOWLING WEREWOLF™ is a trademark of Tekky.

PATENT: https://tekkydesign.com/
pages/terms-conditions.php
Copyright © 2024 Tekky.

All Rights Reserved.

MADE IN CHINA