

LED ANIMATED LURCHING GHOST™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING. ESTIMATED ASSEMBLY TIME TEN MINUTES.


PARTS

PARTS

1. METAL BASE 1
2. METAL BASE 2
3. CENTER POLES
4. GEAR MODULE
5. CHEST BLISTER
6. HEAD WITH BODY
7. WIRE MANAGEMENT CLIP

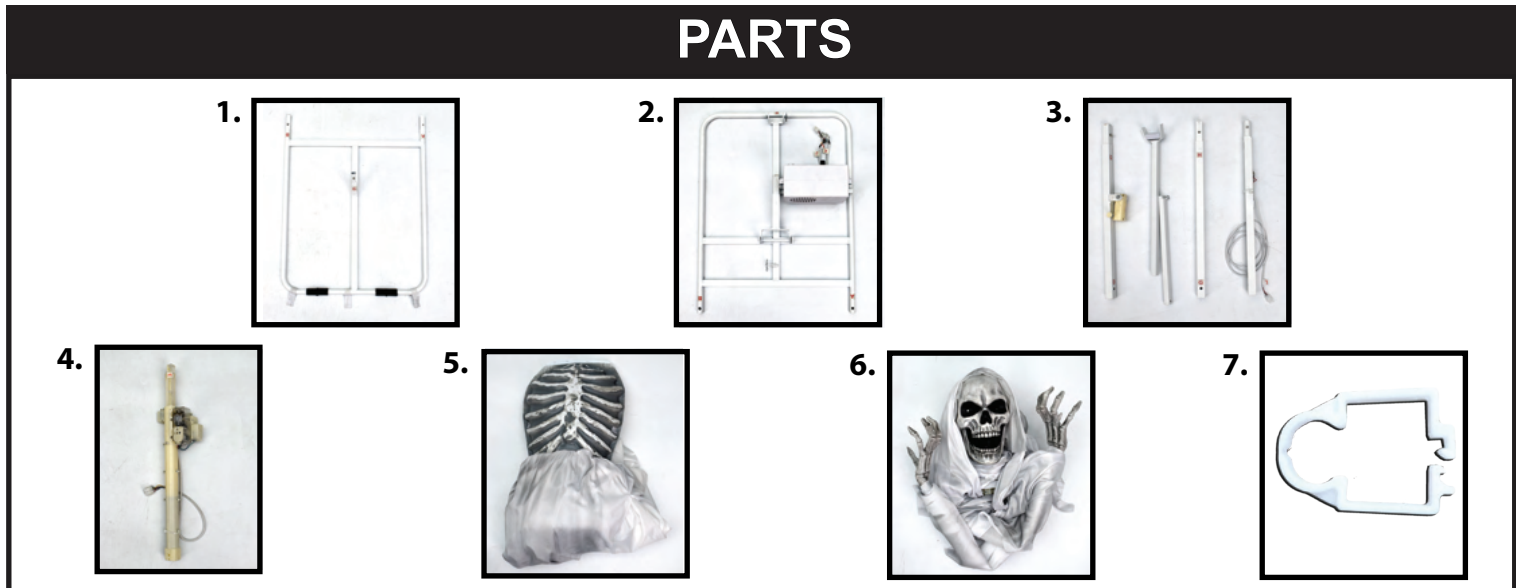


ASSEMBLY

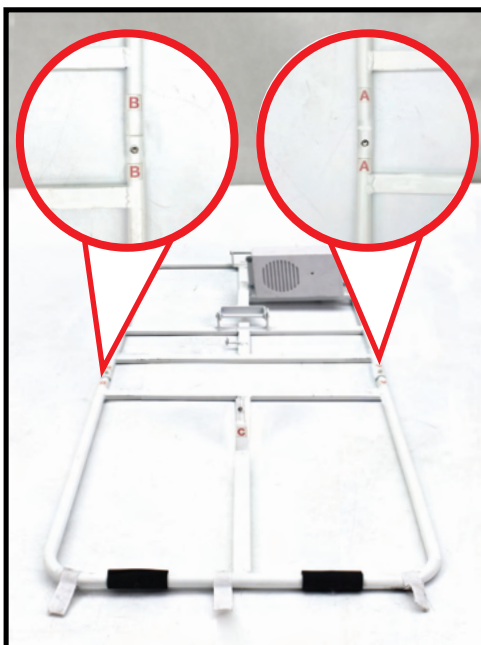


1. Snap lock the METAL BASE 1 to the METAL BASE 2.

MATCH A TO A
MATCH B TO B

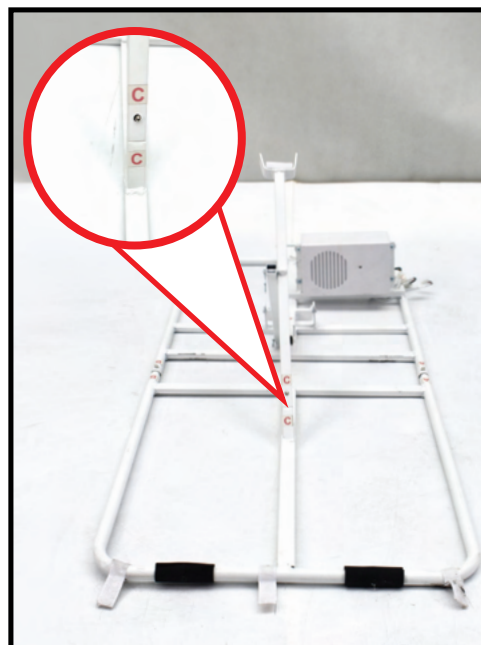


2. Snap lock the CENTER POLE to the METAL BASE.

MATCH C TO C

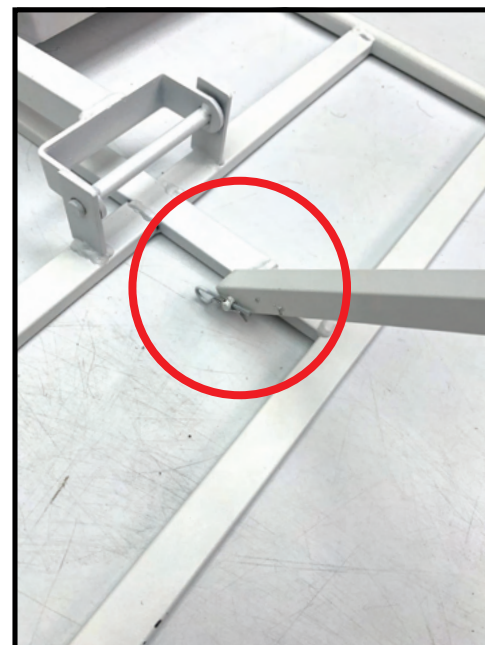


3. Lockdown CENTER POLE support with METAL BASE using clevis and cotter pin.

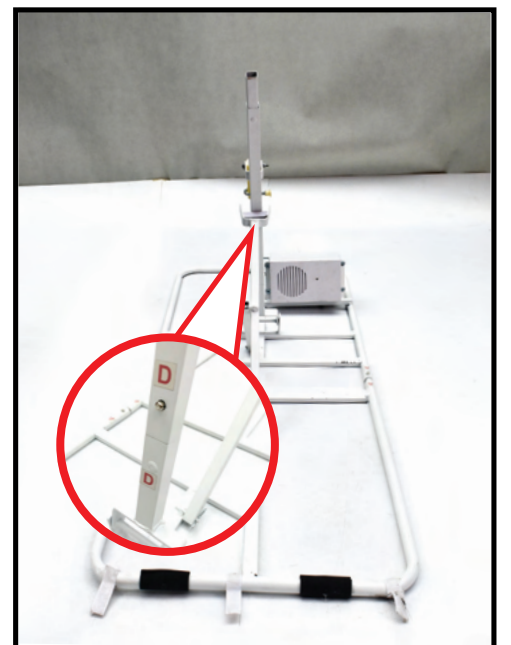


4. Snap lock the CENTER POLE to the METAL BASE.

MATCH D TO D

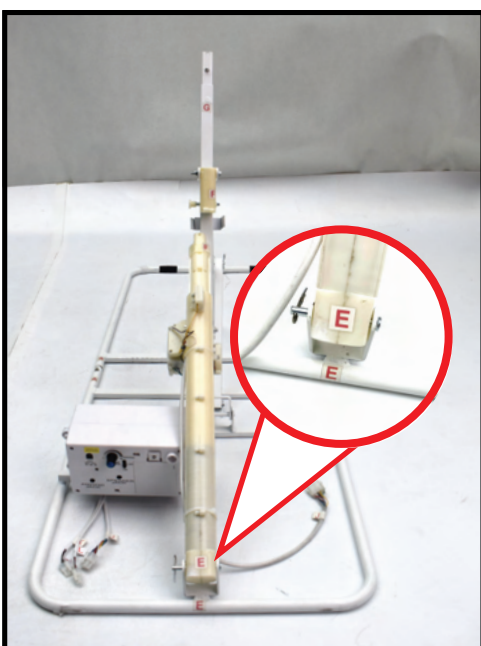


5. Connect GEAR MODULE to METAL BASE using clevis and cotter pin.

MATCH E TO E

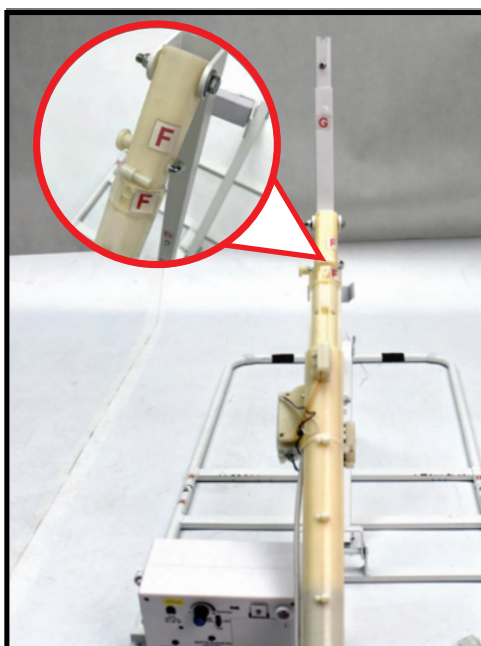


6. Connect GEAR MODULE to CENTER POLE.

MATCH F TO F

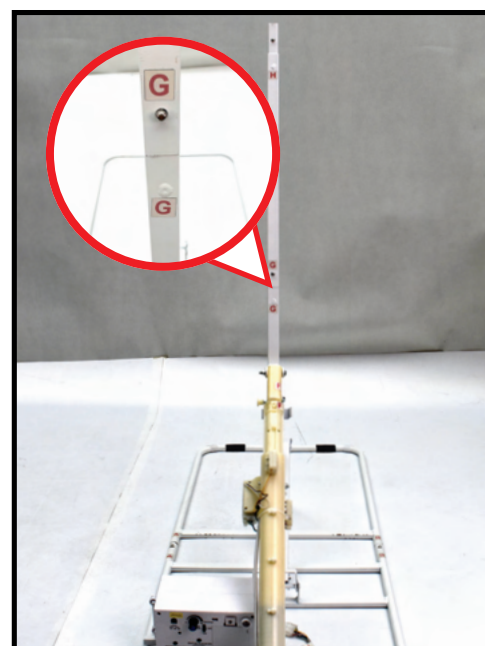

7. Snap lock connect CENTER POLES.


MATCH G TO G

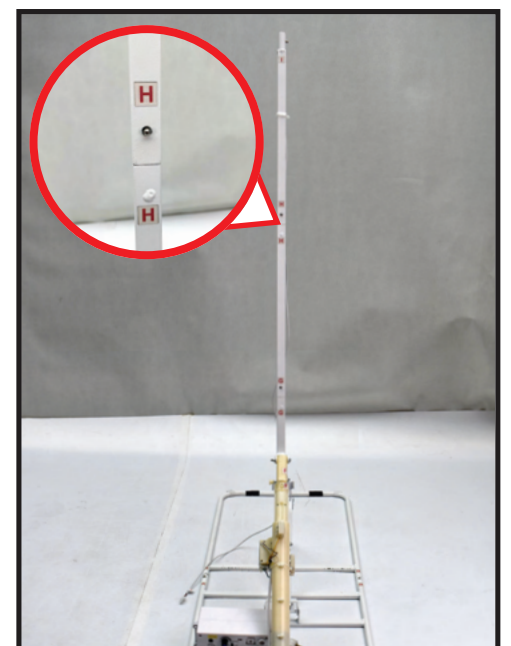

8. Snap lock connect CENTER POLES.

MATCH H TO H

ASSEMBLY

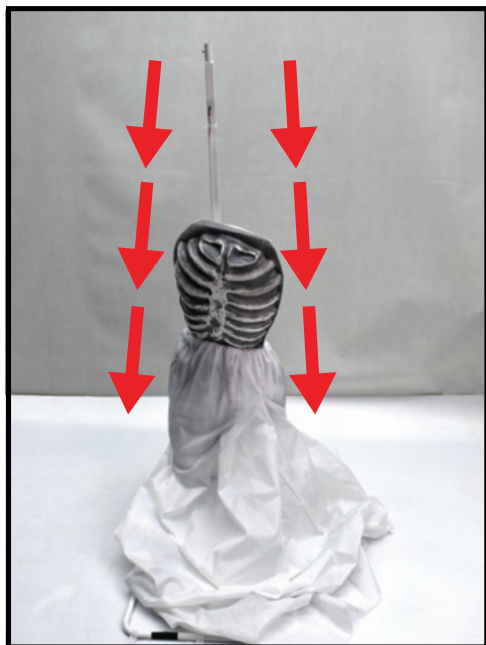

9. Slide CHEST BLISTER down CENTER POLE.




10. Snap lock the HEAD WITH BODY to the CENTER POLE.
MATCH I TO I



11. Use the hook and loop fasteners to attach the HEAD AND BODY to the CHEST BLISTER.



12. Attach the hook and loop fasteners from the HEAD AND BODY costume to the back of the CHEST BLISTER.

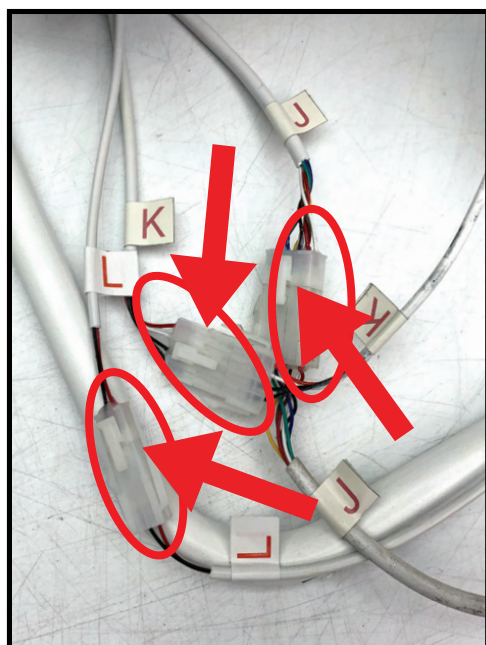


13. Attach the wires to the CONTROL BOX.

MATCH J TO J
MATCH K TO K
MATCH L TO L




14. Attach the WIRE MANAGMENT CLIP to the CENTER POLE.

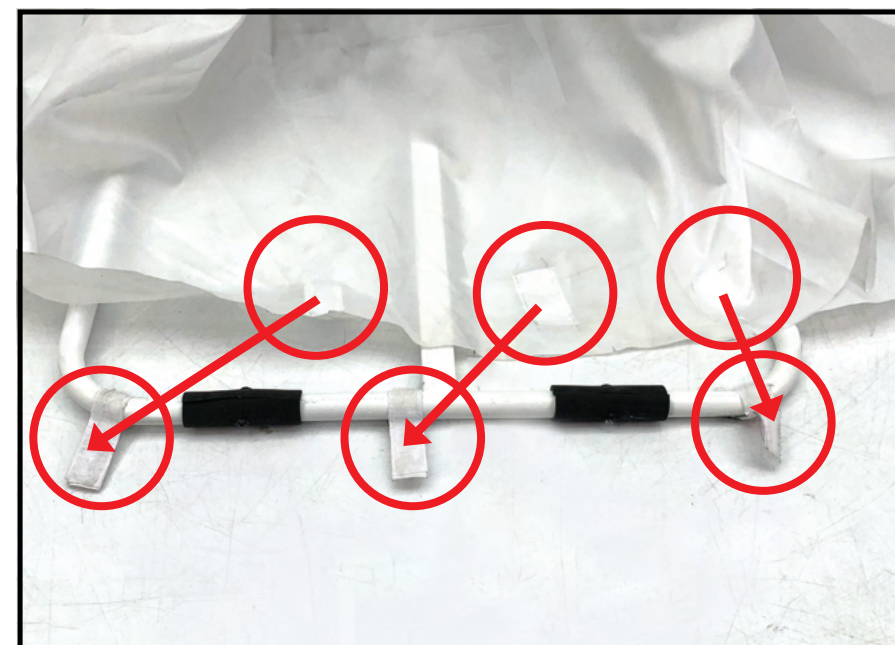

15. Attach the hook and loop fasteners from the costume on the CHEST BLISTER to the METAL BASE.

OPERATING INSTRUCTIONS

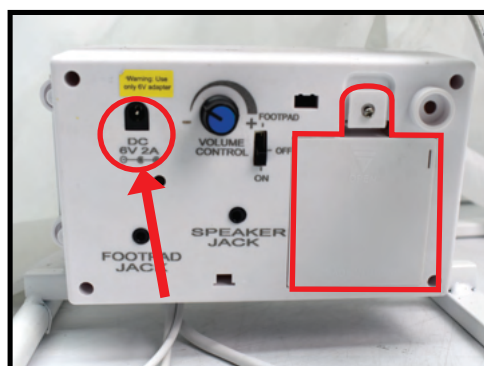

Plug in the 6V 2A ADAPTER (not included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.




Move the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate the item.

Turn the item to the OFF (FOOTPAD) position when not in use.

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the CONTROL BOX.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!
* Footpads are sold separately and can be purchased at www.tekkyaccessories.com

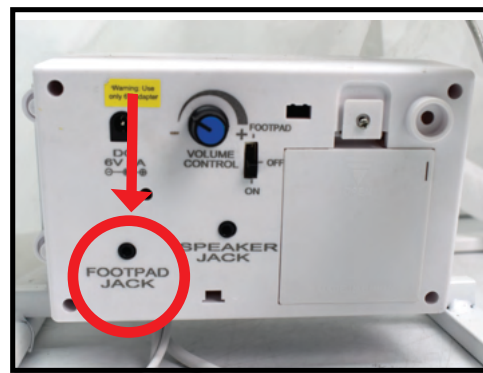


OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



Battery Diagram

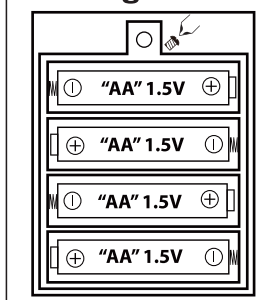

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.
Use only batteries recommended in the instructions.
Do not mix new and used batteries.
Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
Be mindful to insert batteries with the correct polarity (+/-) as indicated.
Remove all exhausted batteries.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the item before being charged.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short-circuited.
Always dispose of exhausted batteries properly.
Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.



visit us at tekkydesign.com

Requires 6V 2A ADAPTER (not included)
or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.
PATENT: <https://tekkydesign.com/pages/terms-conditions.php>
LED ANIMATED LURCHING GHOST™
is a trademark of Tekky.
Copyright © 2024 Tekky.
All Rights Reserved.
MADE IN CHINA

SMART PHONE SCAN SETUP VIDEO

