

flaming green pumpkin™

7.28 IN. (H) (18.5CM)

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

1. Carefully remove and discard "Try Me" wire and packaging.
2. Use a small Phillips/crosshead screwdriver to open the item's battery compartment located on bottom of the FLAMING GREEN PUMPKIN™.
3. Place 3 brand new AA alkaline batteries into the battery compartment and replace cover.
4. Or, alternatively, remove batteries and insert USB cable (not included) into jack labeled "USB" to power the item via USB.
5. Place power switch on bottom of PUMPKIN to the "TIMER" position to operate item in "TIMER" mode: FLAMING GREEN PUMPKIN™ operates continuously for six hours. Operation pauses after six hours continuous play and will automatically resume continuous operation 18 hours later!

NOTE: KEEP power switch in the "OFF" position when not in use.

⚠ WARNING! CHOKING HAZARD - small parts.

This item is not a toy. For decoration only.
This product is intended for use by persons
15 years of age and older. Not intended for use
by children 14 years of age and younger.
(Please retain this information for future reference.)

 
SURFACE WASHABLE ONLY. All new materials: plastic.
Display and operate on level surface. **INDOOR USE.**

Item #61229. FLAMING GREEN PUMPKIN™
is a trademark of Tekky. Copyright © 2024 Tekky.
All rights reserved.

Manufactured for: Tekky, Orland Park IL 60467 USA

TekkyDesign.com

BATTERY INSTRUCTIONS & CAUTIONS



**REQUIRES
3AA
BATTERIES**
(Included for demo
purposes only).

1. Contains (3) AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
2. Battery installation and removal should be performed by an adult. Batteries are harmful if swallowed. Keep away from young children.
3. Remove batteries when not in use.
4. Use only batteries recommended in the instructions.
5. Do not mix new and used batteries.
6. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
7. Be mindful to insert batteries with the correct polarity (+/-) as indicated.
8. Remove all exhausted batteries.
9. Rechargeable batteries are only to be charged under adult supervision.
10. Rechargeable batteries are to be removed from the item before being charged.
11. Non-rechargeable batteries are not to be recharged.
12. The supply terminals are not to be short-circuited.
13. Always dispose of exhausted batteries properly.
14. DO NOT dispose of batteries in fire, they may leak or explode.