AGES 15+

Includes: (1) **ENID SINCLAIR** decoration.

INDOOR USE.

Display on level surface.



ENID SINCLAIR

SOUND AND MOTION ACTIVATED

Don't mess with Enid -- this kitty's got claws and she's not afraid to use them!

> Animation and scarv sounds from the screen!

> > To Activate:

On (sound & motion sensor) / Off / Try-Me (demo)





OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

- 1. Carefully remove and discard "Try Me" wire and packaging items. Please retain box for future reference.
- 2. Use a small Phillips/crosshead screwdriver to open the battery compartment located on bottom of item.
- 3. Place 3 brand new "AA" alkaline batteries into the battery compartment and replace cover.
- 4. Place the power switch, located on bottom of item, to the "ON" position to operate the item in SOUND AND MOTION activation mode. Make a loud sound (clap) or wave your hand in front of ENID to activate the scary sequence!

NOTE: Keep switch in the "OFF" position when not in use.

BATTERY INSTRUCTION AND CAUTIONS

- 1. Contains (3) "AA" 1.5-volt alkaline batteries. Batteries are not rechargeable.
- 2. Battery installation and removal should be performed by an adult. Batteries are harmful if swallowed. Keep away from young children.
- 3. Remove batteries when not in use.
- 4. Use only batteries recommended in the instructions.
- 5. Do not mix new and used batteries.
- 6. Do not mix alkaline, carbon-zinc, nickelcadmium, rechargeable or different types of batteries.
- 7. Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- 8. Remove all exhausted batteries.
- 9. Rechargeable batteries are only to be charged under adult supervision.

10. Rechargeable batteries are to be removed from the item before being charged.

ITEM

#5745190

MADE IN CHINA

Surface


washable only.

All new

materials:

plastic, fabric, wire. Polypropylene foam, polyurethane foam.

- 11. Non-rechargeable batteries are not to be recharged.
- 12. The supply terminals are not to be short-circuited.
- 13. Always dispose of exhausted batteries properly.
- 14. DO NOT dispose of batteries in fire, they may leak or explode.

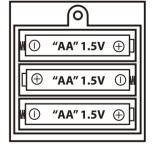

Model #61121. WEDNESDAY ENID SINCLAIR ufactured for: Tekky, Orland Park, IL 60467 USA Distributed by: Lowe's Home Centers LLC 1000 Lowe's Blvd., Mooresville, NC 28117 888-251-1006

WEDNESDAY © 2022 MGM Television Entertainment Inc.
WEDNESDAY is a trademark of Tee & Charles Addams Foundation
© 2024 Metro-Goldwyn-Mayer Studios Inc. All Rights Reserved. TEKKY and the logo design are trademarks of JCW Investments, Inc., d/b/a Tekky, and used under license.



TekkyDesign.com



/ WARNING: CHOKING HAZARD

Small parts. This item is not a toy. For decoration purposes only. This product is intended for use by persons 15 years of age and old Not intended for use by children 14 years of age and younger. Please retain this information for future reference

